



To install this kit, you have been provided all the parts necessary. The front hubs use the 1/16" axle rod and the rear hubs use the 3/32" rod. They're printed installed on the wheels for strength even though hubs are black and wheels are silver.

You will need to grind smooth the extensions on the casting as shown in the pic.

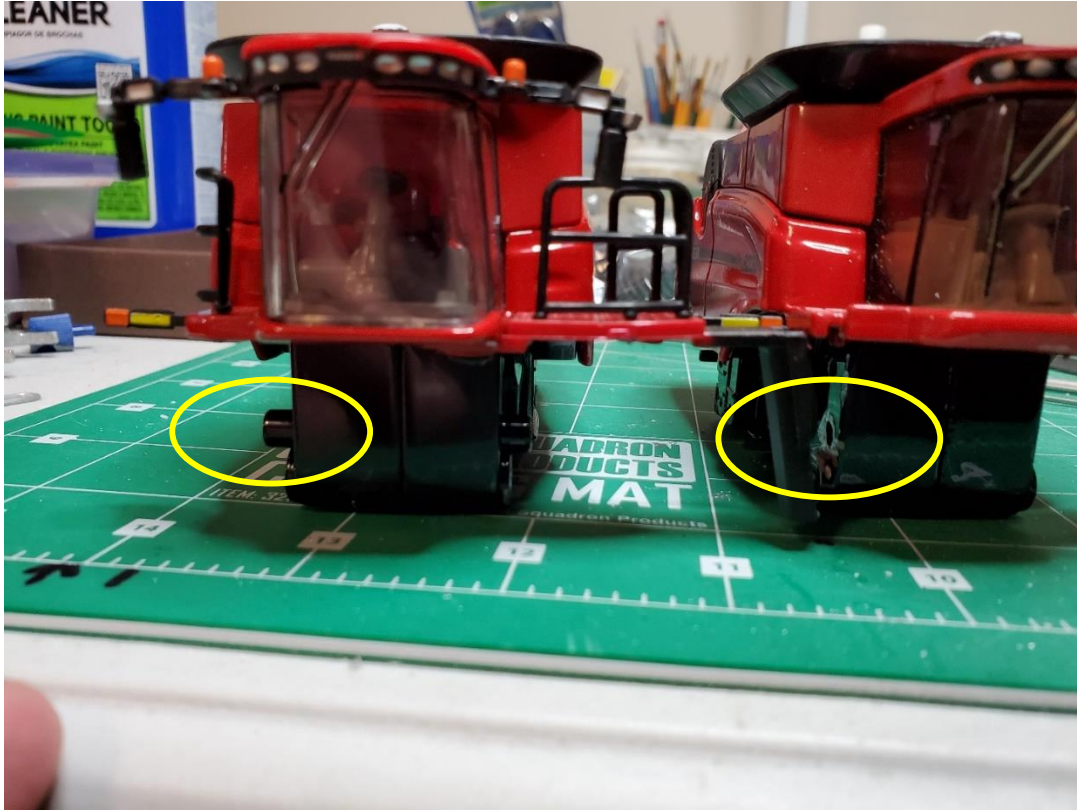

The hub for the front wheels WILL and IS RECOMMENDED to install INSIDE the final drive extensions that are provided. The top of the final drive extensions is marked with black sharpie and reads "top". They will fit slightly loose as they're designed to fit both Case and New Holland castings.

The combine should look as shown in the following picture after you have installed the final drive extensions.

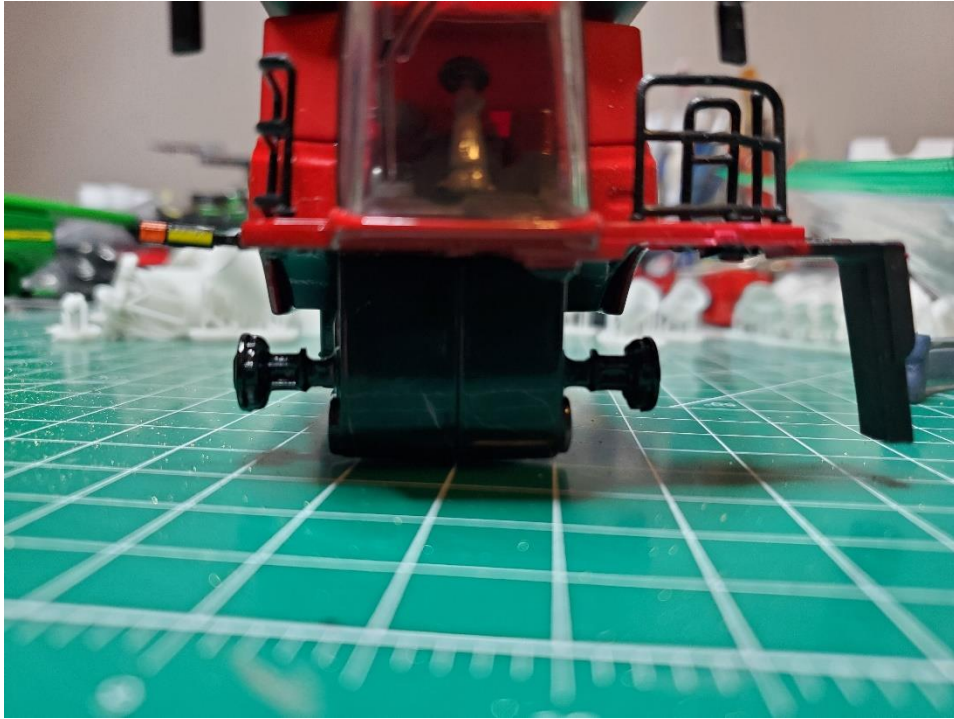

The arrows on the wheels face away from the casting. You will also find there are left and right tires. They are able to be distinguished by the “touch points” on the print.